

Quick Start and User manual V2.0



RX-3^{PRO}

BODY WORN CAMERA

www.rewiresecurity.co.uk

1.

Product Overview

Introduction

The RX-3 pro is a professional grade body worn camera featuring a compact, rugged design with the latest features, including HD recording, on-board playback, wide angle lens & infrared night vision.

Please read this document prior to using the camera, to guide you through the different settings and features of the RX-3HD body worn camera.

2.

Quick Start

Charging

Before using the camera for the first time, the internal li-ion battery will need to be charged for 4-5 hours. To charge the camera, place the unit in the charging dock and connect to the mains using the USB cable and mains charger supplied with your RX-3 pro

Quick Start



3.

Functions

To turn the camera "on" press and hold the **Power Button** for 2 seconds. The unit will vibrate and after initialising start recording video automatically. Turn the camera "off" by pressing and holding the **Power Button** for 2 seconds.

To stop video recording, press the **Video Button**. You can start recording again by pressing the **Video Button** again. The camera will vibrate to confirm the action for each successful button press.

The cameras built in screen will automatically turn off after 60 seconds. To turn the screen off manually, **lightly press the Power button**. To turn the screen back on, **lightly press the Power Button again**. The time it takes before the screen goes into standby mode can be adjusted in the setting menu.

To take a still image using the camera press the **Camera Button**. This can be done either while the camera is in standby mode or recording video. The camera will make an audible click to confirm that a picture has been taken.

To activate the different camera night-vision modes press the **Light Button**. To activate infrared mode press the **Light Button** for 1 second. To activate front LED flash light press and hold the **Light Button** for 2 seconds.

To activate audio recording press the **Audio Button** for 1 second while the camera is in standby mode. Stop the audio recording by pressing the **Audio Button** for 1 second again. The camera will vibrate to confirm the action for each successful button press.

4.

Functions



Video Playback

To enter media playback menu press the **Play/Pause Button** and the camera will automatically start playing back the last recorded file. To change to a different recorded file press the **OK button** and use the **M Button to cycle through** the different recorded files of that type. Once in the media playback menu press the **Power Button** twice for 1 second to view the media type menu. Use the **M Button** to select the different types of recorded files and the **OK Button** to confirm. Exit playback mode by pressing the **Power Button** for 1 second to go back.

Features

One Key Audio Recording: Press and hold the Audio Button while the camera is turned off. The camera will vibrate to confirm the action and automatically turn on and start audio recording.

One Key Video Recording: Press and hold the Video Button while the camera is off. The camera will vibrate to confirm the action and automatically turn on and start video recording.

5.

Functions

One Key Playback: In standby mode press the Play/Pause Button. The camera will automatically start playing back the last recorded file.

Quick Changing Video Resolution: To switch between SD 480 & HD 720 resolutions without going to the main menu, press and hold the Audio Button for 4 seconds there will be a visual indication on the screen for the current resolution.

Taking Snapshots: To take a snapshot press the Camera Button on the side of the camera. To take a snapshot with flash first press the Camera Button for 4 seconds to activate the flash mode and then press the camera button again to take a snapshot with flash. To turn the flash off press and hold the Camera Button again for 4 seconds.

Tagging important files: While recording video you can tag an important file by pressing the Star Button. The camera will vibrate to confirm the action. When you view the file in the media playback menu the file will be tagged with a star.

Digital Zom: While recording press the M Button to zoom in and the Play/Pause Button to zoom out. Please note that digital zoom is only available in SD480 and HD720 resolutions.

Laser Pointer: To activate the laser pointer press and hold the OK Button. The laser pointer can be activated while in standby or video recording mode. To turn off press and hold the OK Button again. **Caution:** This device generates a visible red light that is moderately hazardous and should not be viewed by the naked eye on the same axis as the beam.

Fast Forward & Rewind: While a video file is playing press the M Button to fast forward press the Play/Pause Button. You can change the play back speed between 2x, 4x, 8x, 16x, 32x& 64x by pressing the Button multiple times.

Media Menu

To enter the Media Menu press the OK button. Use the Play/Pause and M Buttons to navigate left and right, press OK Button to confirm and the Power Button to go back.

Settings Menu

To enter the Settings Menu press the M Button. Use the Play/Pause and M Buttons to navigate up and down, press the OK Button to confirm and the Power Button to go back.

Video Resolution: Change between 848X480 30P 16:9 / 720X480 30P 4:3/ 848X480 60P 16:9/ 1280X720 30P 16:9/ 1280X720 60P 16:9/ 1440X1080 30P 16:9/ 1920X1080 30P 16:9 resolutions for recorded video files.

Burst Mode: Select how many pictures are taken when the Picture Button is pressed. Choose between 1,2,3, 5 & 10 pictures per burst.

Self Timer: Select an audible countdown before a picture is taken when the Picture Button is pressed. Choose between a 5 or 10 second delay.

7.

Menu Settings

Delay Capture: Select the time between each snapshot once the Picture Button is pressed. Choose between 5 & 10 seconds, once activated the camera will continue to take pictures at the pre-set interval, until the M Button is pressed to stop the camera.

Quality: Select the sharpness of still images when the Picture Button is pressed. Choose between super fine, fine & normal.

Pre-record: Once activated the RX-3 pro will always keep recording video on it's temporary buffer flash memory. This way when the record button is pressed, the recorded footage will start from 10 seconds prior to the recording time.

Delay record: Select how long the camera will continue recording after the Video Button has been pressed to stop recording. Choose between 5 seconds, 5 or 10 minutes.

Split Time: Select how long the camera records before creating a separate video file. Choose between 5, 10, 15, 30 & 45 minutes.

Slide Show: Once activated, captured photos in the gallery will automatically be cycled though at 5 second intervals.

Infrared: Once activated the camera will automatically switch to night vision mode in low light conditions.

Record Warning: Once activated you will hear an audio prompt from the camera to confirm that video recording has started.

Screen Saver: Select the amount of time before the camera's built in screen goes into standby mode. Choose between 30 seconds, 1 minute, 3 minutes & 5 minutes. Please note the screen saver feature will significantly increase the battery life.

LCD Brightnes: Select the brightness of the built in LCD screen on the camera. Choose between high and low brightness levels.

8.

Menu Settings

Auto Power off: Select the time period before the camera automatically shuts down if not recording. Choose between 30 seconds, 1 minute, 3 minutes & 5 minutes.

LED indicator: Turn the LED indicator light on the top left of the camera on or off.

Volume: Adjust the volume of the built in speaker on the camera.

Time & Date: Set the current time and date in the yyyy/mm/ddhh:mm format.

ID Setting: Set the unique ID of the camera as well as an ID of the user which will be stored to therecorded files

Default Setting: Use this option to restore the camera to the factory default settings.

Firmware: Displays the cameras current version of firmware.

Video Out

You can connect the camera to an external screen via HDMI. To connect by HDMI you will need a standard mini HDMI to HDMI cable (not included).

Downloading Recorded Media

To download the recorded media from your RX3-HD camera use the USB cable supplied. Connect the smaller mini USB cable to either the USB port of the camera dock or the camera and then the other end to the USB port of the computer. Once connected the camera will automatically turn and appear as a removable drive.

Contents

1x RX-3 PRO Camera	1X Klickfast Mount
1x Charging Dock	1x Mini USB Cable
1x USB Cable & Mains charger	1x Instruction Manual



Class 1 Laser

A class 1 laser is used on the RX3 Pro for camera alignment feature. A class 1 laser is safer for the human eye and the blink reflex will limit the exposure to no more than 0.25 seconds. Intentional suppression of the blink reflex could lead to eye injury. Many laser pointers and measuring instruments are class 1. More information; <https://www.gov.uk/government/publications/laser-radiation-safety-advice/laser-radiation-safety-advice>